


SERIES 2200 WHITE 3400, 5400

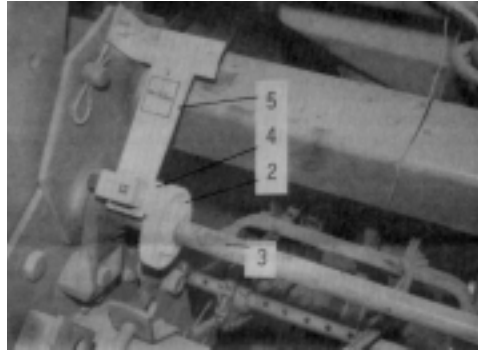

1. Press counter gear (4) onto counter shaft. Be certain to match the correct gear with planter row spacing as shown on chart below. Secure with acorn nut.
2. Bolt counter to bracket (5).
3. Bolt bracket (5).
4. Mount split gear (2) onto shaft making certain the gears are aligned and tightened.
5. Calibrate the counter using instructions on back of this sheet.

No of Rows	Row Spacing	Counter Gear
4.....	28.....	28
4.....	30.....	26
4.....	32.....	24
4.....	36.....	21
4.....	38.....	20
4.....	40.....	19
6.....	30.....	18
6.....	36.....	14
6.....	38.....	13
6.....	40.....	13
8.....	30.....	13
8.....	36.....	10
8.....	38.....	10
8.....	40.....	9
12.....	30.....	8

