



SERIES 2301 JOHN DEERE 494AN, 694, 694AN, 695A, 894A, 1250,
1260, 1280, 1290

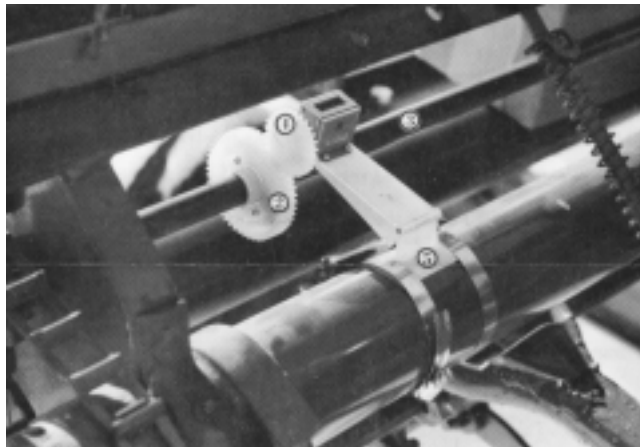

1. Mount strap gear (2) on 7/8" shaft (3) being certain the two parts are properly matched.
2. Press counter gear (4) onto counter and secure with acorn nut. Be certain to match the correct gear with planter row spacing as shown on chart below. Mount counter on the bracket (5) as shown.
3. Clamp bracket around main pipe frame of planter using hose clamps and align counter gear with (4) with strap gear (2) spacing.
4. With planter in the down position, move bracket (5) until gear (4) is directly above strap gear (2). Tighten hose clamps.
5. Calibrate the counter using instructions on back of this sheet.

JOHN DEERE 494AN, 694, 694AN, 1250, 1260, 1280

<u>No of Rows</u>	<u>Row Spacing</u>	<u>Counter Gear</u>
4.....	38.....	32
4.....	40.....	30
6.....	30.....	27
6.....	36.....	22
6.....	38.....	21
6.....	40.....	20
8.....	30.....	20

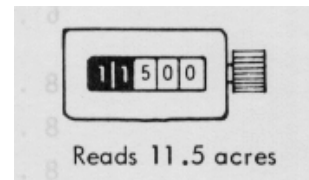

JOHN DEERE 694A, 695A, 894A

<u>No of Rows</u>	<u>Row Spacing</u>	<u>Counter Gear</u>
6.....	36.....	20
6.....	38.....	19
6.....	40.....	18
8.....	30.....	18

JOHN DEERE 1290

<u>No of Rows</u>	<u>Row Spacing</u>	<u>Drive Ratio</u>	<u>of</u>	<u>Planter</u>
		2:1		1.5:1
8.....	36.....	21.....		15
8.....	38.....	20.....		15
8.....	40.....	19.....		14